

1. Remove seat from vehicle. Remove front and rear rocker panel covers. Remove B-pillar cover. Remove A-pillar covers (2 pcs.) Remove inside door panel. *Note that the speaker and lower speaker mounting posts must be removed to allow door panel to slide upwards.




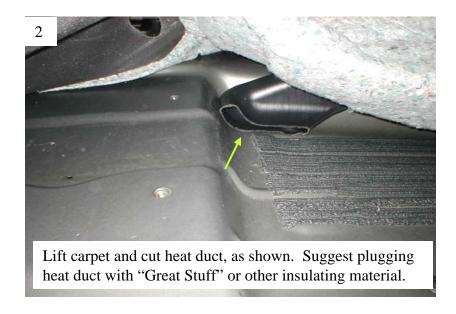



2006 Ford F-150, 4-door, installation instructions

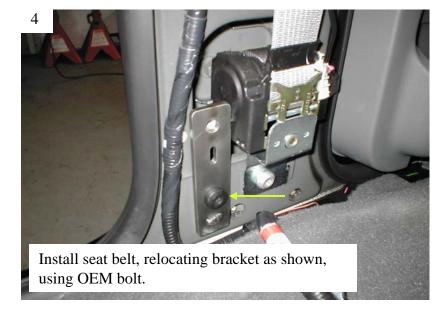


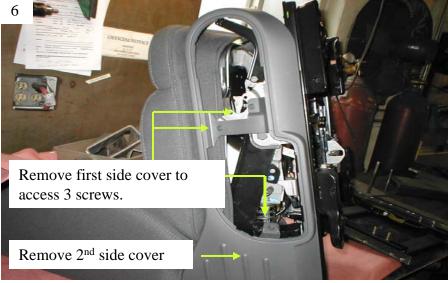







2006 Ford F-150, 4-door, installation instructions

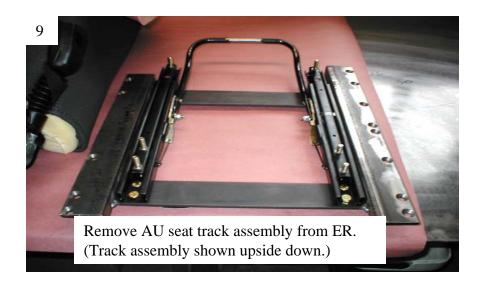


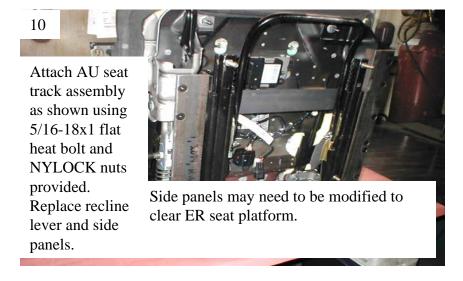


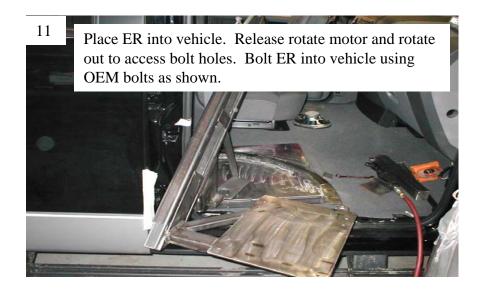





2006 Ford F-150, 4-door, installation instructions

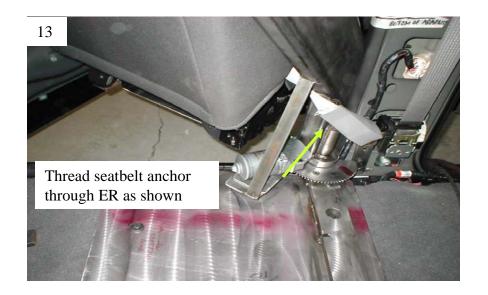


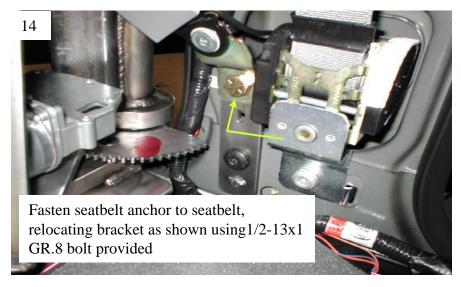

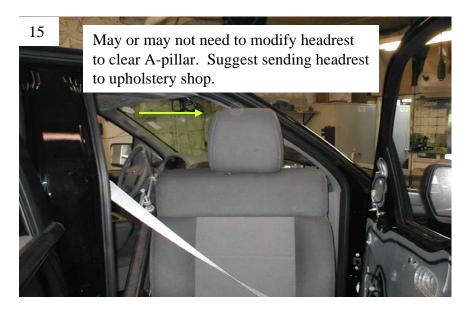

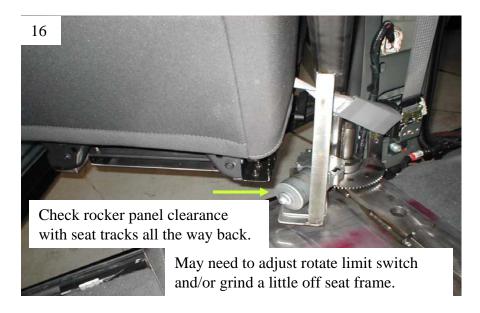

2006 Ford F-150, 4-door, installation instructions

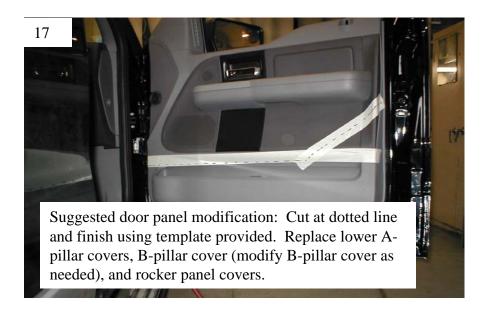

18. Attach seat wires to coil cord provided and OEM wire harness to other end of coil cord. E sure that neither coil cord nor wire harnesses interfere with operation of ER or seat sliding back and forth.